



Tekla

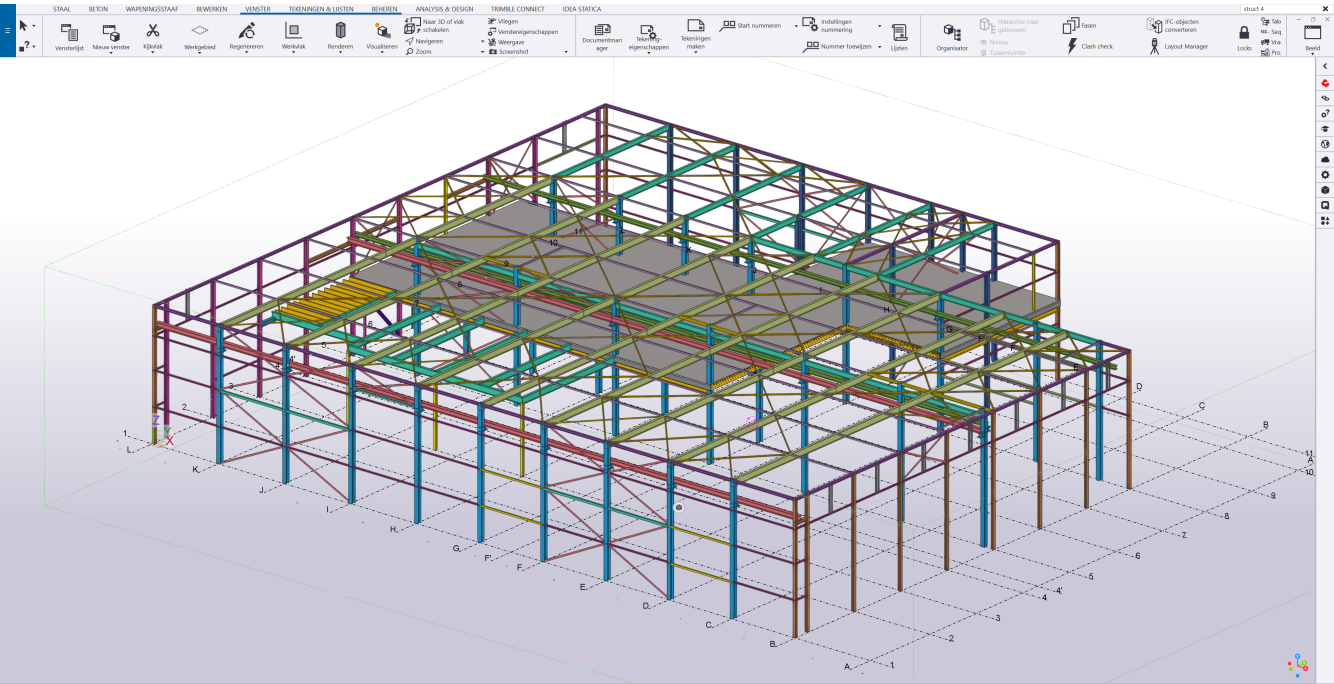

XFEM4U

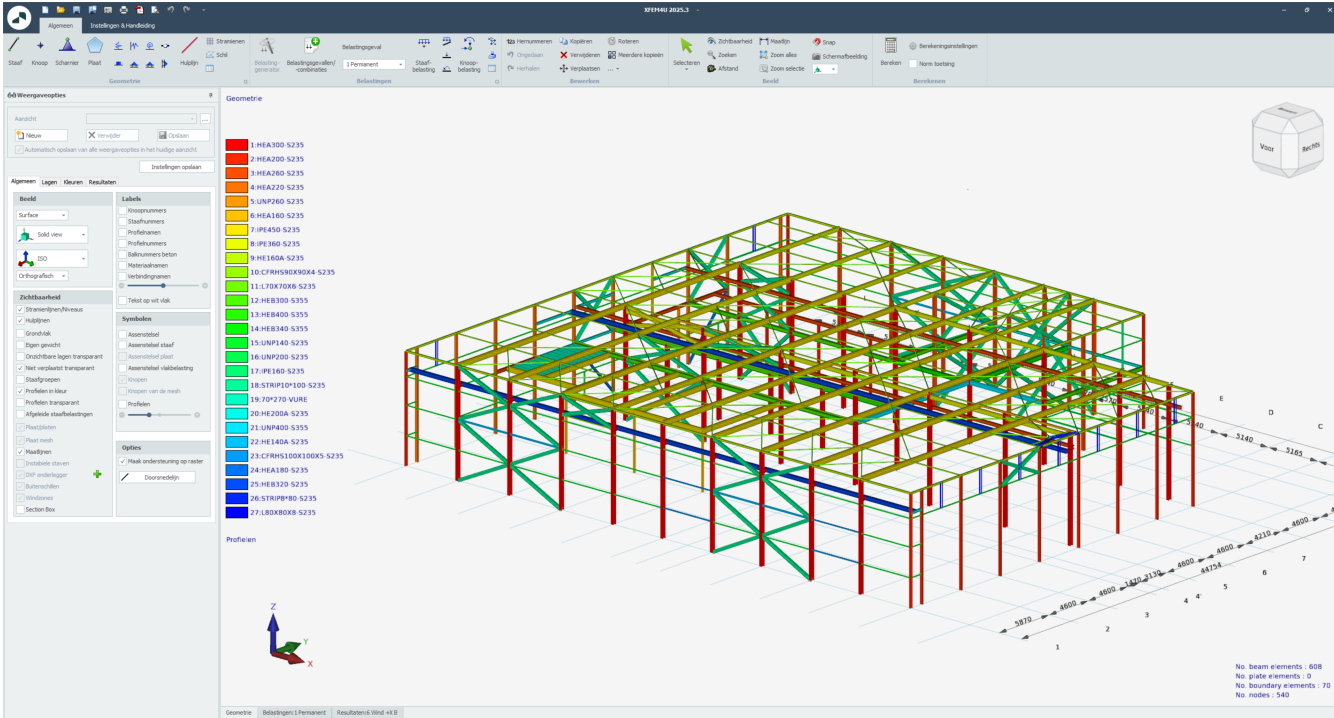

Working Method

When exporting to XFEM4U, the position of the element is determined from the start and end points of the elements in Tekla. These are the yellow and magenta points. These become the nodes in XFEM4U. This has to be taken into account when modeling. The offset/position relative to these points given to the element is ignored when exporting.

